


# **SUZUKI SWIFT**

Z12E engine with mild hybrid system model 5 doors / 5 seats 2023-12







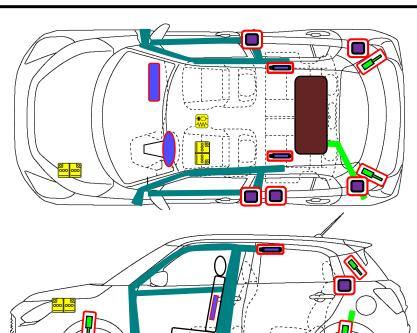

	Airbag		Stored gas inflator		Seat belt pretensioner		Sensing and Diagnostic Module (SDM)		Pedestrian protection active system
7	Automatic roll- over protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention	4	High voltage component
000 000	Battery low voltage	+	Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
0	High voltage battery pack	N	High voltage power cable/ component		High voltage disconnect		Fuse box disabling high voltage system	14	Ultra capacitor, high voltage
				ID No.	Version No. Version		date	Page	
				AOL312	01 12/20		3	1 / 4	

## 1. Identification / Recognition

Location of vehicle badges




## 2. Immobilization / Stabilization / Lifting

Immobilize the vehicle




Chock the wheels and engage the parking brake.

Manual Transmission Model




CVT Model



2. Move the shift lever to the park (P) position.

Lifting points

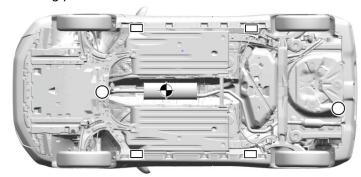

- Floor jack position
- Position of center of gravity without load in vehicle
- Support position for frame contact hoist and safety stand



Do not place supports such as wooden blocks or life pillows under the exhaust and fuel systems. Doing so can cause fuel leakage and fire.

## 3. Disable Direct Hazards / Safety Regulations

 If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.

Power door lock Power window Back door

When the 12 V battery is disconnected, electrical components cannot be operated.

ID No.	Version No.	Version date	Page
AOL312	01	12/ 2023	2/4


• Perform procedure 1 or 2 to completely shut off the vehicle.

#### Procedure 1:







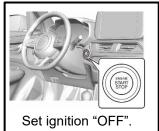



Move 20 feet away from the vehicle.





Disconnect negative (-) cable at battery.

### Procedure 2:






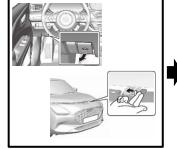



IGN Fuse (50 A)



Disconnect negative (-) cable at battery.

Access to 12 V Battery:











Disconnect negative (-) cable at battery.

# 4. Access to the Occupants





ID No.	Version No.	Version date	Page
AOL312	01	12/ 2023	3 / 4

## 5. Stored Energy / Liquids / Gases / Solids



12V battery



Lithium-ion battery



Fuel tank: 37 L











Always wear appropriate personal protective equipment (PPE) when dealing with any of these items.

#### 6. In Case of Fire












Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!

#### 7. In Case of Submersion



Work on the vehicle only after the vehicle has been pulled out of the water.

### 8. Towing / Transportation / Storage



























Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.

# 9. Important Additional Information

For further details, please refer to "Emergency Response Guide".

## 10. Explanation of Pictograms Used

For further details, please refer to "Emergency Response Guide".

ID No.	Version No.	Version date	Page
AOL312	01	12/ 2023	4 / 4